


The AE 505 Touch-Screen Label Printing Indicator ushers in the next generation of weighing indicators with a user-friendly, intuitive interface, the convenience of customised label designing and printing, and the ease of wireless data transmission. Included software allows users to create and print fully customisable labels (featuring options like weighing results, logos, QR codes and bar codes) of multiple lengths. AE 505 stores up to 10 designs for frequent use. Data transmission is simple with USB or RS-232 interfaces, as well as optional ethernet, Wi-Fi and Bluetooth. AE 505's ABS plastic housing makes it durable enough to stand up to the demands of manufacturing facilities, shipping and receiving areas, packing locations, and distribution warehouses.



The smart choice with touchscreen operation, connectivity and built-in label printing

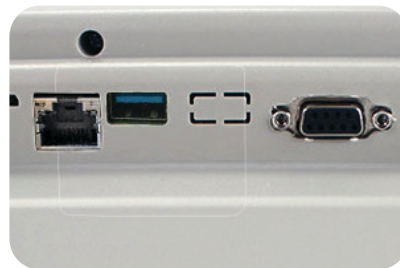

Features

- Checkweighing with audible alarm
- Color-coded keys facilitate quick recognition of the most frequently used buttons
- Rugged construction stands up to industrial use
- Sealed keypad protects against dirt and spills
- Built-in printer can print weight, QR codes, bar codes and customized labels in numerous languages
- Rechargeable battery included for operation almost anywhere
- Programmable auto power-off to save energy
- Memory accumulation totals results
- Parts counting optimization automatically refines piece weight as parts are added
- Zero-tracking feature ensures display returns to zero reading
- 1:600,000 internal counting resolution
- USB and RS-232 interfaces provide speedy communication with computers and printers
- Product look up (PLU) memory locations store a range of items for recall
- Selectable language for printing
- Parts counting with freely selectable sample sizes

Applications

- Weighing
- Percentage weighing
- Checkweighing
- Accumulation
- Barcode / label printing
- Parts counting
- Averaging
- Net total weighing

About ADAM:

For more than 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Product Details

Model	AE 505
Capacity	Selectable
Readability	Selectable
Weighing Units	g, kg, lb, lb:oz, oz, ct, dr, mm, tLJ, T
Interface	RS-232, USB, Ethernet RJ45, Wi-Fi, Bluetooth
Calibration	External
Display	8" / 200mm Touchscreen
Power Supply	12VDC 3A adapter, Internal rechargeable battery
Operating Temperature	0° to 40°C
Housing	ABS Plastic
Overall Dimensions (WxDxH)	300 x 170 x 125mm

Accessories

Item Number.....Description

- 400005615..... Labels — 800 per roll
- 3014011014..... RS-232 cable 9M-9F
- 3074010507..... RS-232 to USB adapter
- 600002028..... AdamDU Data Collection Program
- 700660290..... Calibration certificate

Key Accessories



Labels

A roll of 800 sticky labels intended for use with our AE 503, 504 and 505 Label Printing Indicators. Print weight, QR codes, bar codes and bespoke labels in numerous languages.



AdamDU Data Collection Program

Adam DU quickly collects information from up to eight Adam balances simultaneously. An easy-to-use interface with a main command window allows the user to view and manage data capture sessions.