




The Cruiser CKT is a durable, versatile scale for industrial counting and weighing needs. Ideal for stock control tasks, checkweighing during packaging processes and general weighing, CKT can help reduce waste and eliminate shortages. The backlit display changes colour to show if a sample is under, over, or within the preset limits. Store up to 10 high/low checkweighing limits to improve efficiency in production or warehouse applications. Designed to be tough, the Cruiser CKT features ABS housing, stainless steel platform, non-slip feet and load cell protection.

Cruiser delivers powerful performance for industrial applications

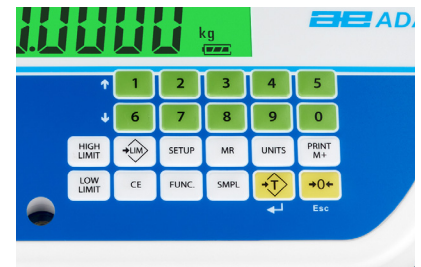

Features

- Backlit display changes colour for quick notification of checkweighing limits
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- Large, grade 304 stainless steel pan allows easy cleaning
- RS-232 interface provides speedy connection to computers and printers
- Optional USB interface simplifies data communication
- Sealed keypad protects against dirt and spills
- Solid ABS housing is durable for industrial use
- Adjustable levelling feet help optimise setup
- Drip channels help divert spills away from the scales internal components
- Programmable auto power-off to save energy
- Rechargeable battery included for operation almost anywhere
- Checkweighing with audible alarm
- External calibration allows for verification and adjustment with weights
- 1:1,600,000 Internal counting resolution for precise results
- Store up to 10 high/low checkweighing limits for fast recall
- Parts counting optimisation automatically refines piece weight as parts are added
- Parts counting with freely selectable sample sizes
- Preset tare function speeds the process of repetitive weighing
- Optional hook enables below-balance weighing

Applications

- Weighing
- Parts counting
- Checkweighing
- Check counting
- Accumulation of weight
- Percentage weighing
- Net total weighing

About ADAM:

For more than 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Product Details

Model	CKT 4	CKT 8	CKT 8H	CKT 16	CKT 32	CKT 48	CKT 8UH	CKT 16UH	CKT 32UH	CKT 48UH
Capacity	8lb / 4kg	16lb / 8kg	16lb / 8kg	35lb / 16kg	70lb / 32kg	100lb / 48kg	16lb / 8kg	35lb / 16kg	70lb / 32kg	100lb / 48kg
Readability	0.0005lb / 0.2g	0.001lb / 0.4g	0.0002lb / 0.1g	0.002lb / 1g	0.005lb / 2g	0.01lb / 4g	0.0001lb / 0.05g	0.0002lb / 0.1g	0.0005lb / 0.2g	0.001lb / 0.5g
Repeatability (S.D.)	0.0005lb / 0.2g	0.001lb / 0.4g	0.0004lb / 0.2g	0.002lb / 1g	0.005lb / 2g	0.01lb / 4g	0.0002lb / 0.1g	0.0004lb / 0.2g	0.001lb / 0.4g	0.002lb / 1g
Linearity (+/-)	0.0005lb / 0.2g	0.001lb / 0.4g	0.0004lb / 0.2g	0.002lb / 1g	0.005lb / 2g	0.01lb / 4g	0.0006lb / 0.3g	0.001lb / 0.6g	0.002lb / 1.2g	0.006lb / 3g
Pan Size	11.8" x 8.3" / 300x210mm									
Weighing Units	g, kg, lb, oz, lb:oz									
Stabilization Time (sec)	2									
Interface	RS-232, Optional USB									
Calibration	External									
Display	Backlit LCD with 0.6"/15mm-high digits									
Power Supply	12VDC 800mA adapter; Internal rechargeable battery									
Operating Temp.	-10° to 40°C / 14° to 104°F									
Housing	ABS Plastic									
Overall Dim.	12.5" x 14" x 4.75" / 315 x 355 x 120mm									

Accessories

Item NumberDescription

- 3022013912..... Hard carrying case with lock
- 3022013911..... In-use cover
- 2020013913..... In-use cover (pack of 5)
- 2020013914 In-use cover (pack of 10)
- 3074010267 USB Cable
- 3014011014..... RS-232 cable
- 1120014641..... AIP Impact Printer
- 1120011156..... ATP Thermal Printer
- 600002028..... AdamDU Data Collection Program
- 2020013915 USB Option
- 700660290 Calibration certificate
- 303149759..... Vegetable Scoop (complete with fitting to scales)
- 303149760..... Confectionery Scoop (complete with fitting to scales)

Key Accessories



Scoops

Metal scoops are designed to make portioning and food measurement easy. Two sizes available: small and large.



AIP Impact Printer

Easy to use, the AIP high-speed dot matrix printer connects with any device containing an RS-232 or USB interface. Communication is smooth and fast, as the AIP automatically detects a scale's settings. AIP features durable ABS plastic construction and is simple to use, as it operates with just an on/off switch and a paper feed button.

Supplied by